



7 & 8 obscured

	<p><b>A Absorber #1</b></p>	<p>This is the first absorber to be hit in the event of an accident. It is located on the outside rear of the attenuator. Marked number 1 in the diagram.</p>
	<p><b>B Absorber #2</b></p>	<p>Absorbs energy in the event of an accident. It is located on the inside rear of the attenuator. Marked number 2 in the diagram.</p>
	<p><b>C Absorber #3</b></p>	<p>Absorbs energy in the event of an accident. It is located on the inside front of the attenuator. Marked number 3 in the diagram.</p>
	<p><b>Arm Assembly #4 &amp; #5</b></p>	<p>Arms have a specific curve which allows them to absorb a certain amount of force before folding at their mid point.</p>
	<p><b>Cartridge Frames #6</b></p>	<p>Attaches to the rear diaphragm assembly to mount the A absorber.</p>
	<p><b>Rear Diaphragm Assembly #6</b></p>	<p>Assembly to mount A and B absorbers via the Top and Bottom Angle Brackets. Connected via Frame Assembly or 'arms'</p>



	<p><b>Front Diaphragm Assembly #7</b></p>	<p>Part of the assembly that attaches the attenuator assembly to the mounting frame. It also mounts the C absorber in place.</p>
	<p><b>Attenuator Back Up Plate #7</b></p>	<p>Full assembly for the front of the attenuator. Includes front diaphragm assembly as well as front top and bottom angles.</p>
	<p><b>Left &amp; Right Hydraulic Bracket #8</b></p>	<p>For mounting the Backing plate to the mounting plate</p>
	<p><b>Jack Stand - Rear #9</b></p>	
	<p><b>Tail Light #10</b></p>	
	<p><b>Rear Reflector Strip #11</b></p>	
	<p><b>Scorpion Wiring Junction Box #12</b></p>	
	<p><b>Drop Jack Wheel #13</b></p>	
	<p><b>Hydraulic Ram</b></p>	<p>Lifting and lowering the Scorpion unit. There are two per attenuator.</p>
	<p><b>Hydraulic Pump</b></p>	<p>Pump for the hydraulic components of the Scorpion lifting assembly.</p>



	<p><b>Two Button Controller</b></p>	<p>Up and down controller that plugs into a socket in the side of a TMA.</p>
	<p><b>Pump Valve Down</b></p>	<p>Replacement valve for the hydraulic pump.</p>
	<p><b>Pump Valve Up</b></p>	<p>Replacement valve for the hydraulic pump.</p>
	<p><b>Coil</b></p>	
	<p><b>Solenoid</b></p>	<p>Part of Hydraulic pump assembly.</p>
	<p><b>Attenuator Tail Light Brackets</b></p>	<p>Replacement tail light brackets for nuisance accidents.</p>
	<p><b>Attenuator Velocity Fuses</b></p>	<p>Kit of replacement seals for EC11001-Hydraulic Rams</p>
	<p><b>Hydraulic Ram Seal Kit</b></p>	
	<p><b>Fuse 150 Amp</b></p>	<p>Replacement fuse for Scorpion Attenuator</p>

**AUCKLAND**

8 Hotunui Drive  
Mt Wellington  
PO Box 14111  
Panmure, Auckland  
Phone 09 259 2600  
Fax 09 259 2610

**WELLINGTON**

26 Cashew Street  
Grenada North  
PO Box 13351  
Johnsonville, Wellington  
Phone 04 232 3774  
Fax 04 232 3776

**CHRISTCHURCH**

14A Hillview Road  
Phillipstown  
PO Box 10036  
Phillipstown, Christchurch  
Phone 03 366 0512  
Fax 03 366 0515

**INVERCARGILL**

200 Bond Street  
Invercargill  
PO Box 313  
Invercargill  
Phone : 03 211-0300  
Fax 03 214 1711

